






FVN5084
CODA
INSTALLATION GUIDE

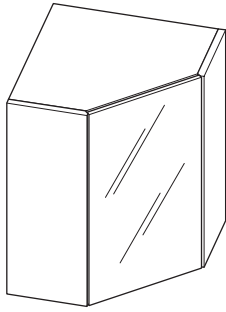



Medicine Cabinet
(Optional)

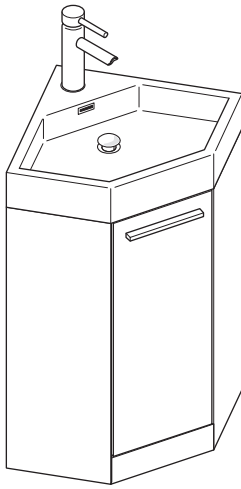

Vanity Front

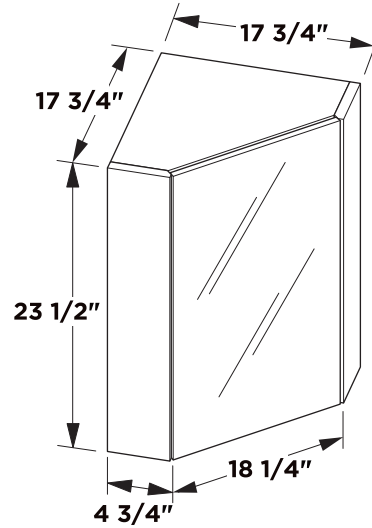

Vanity Back

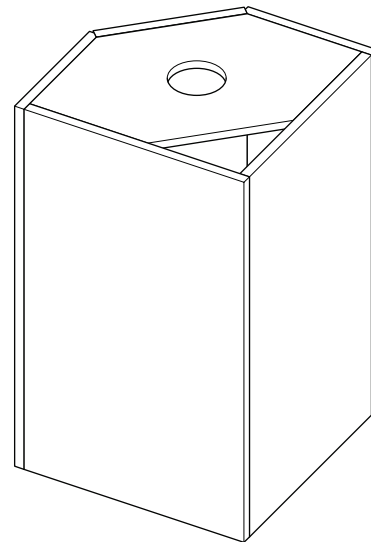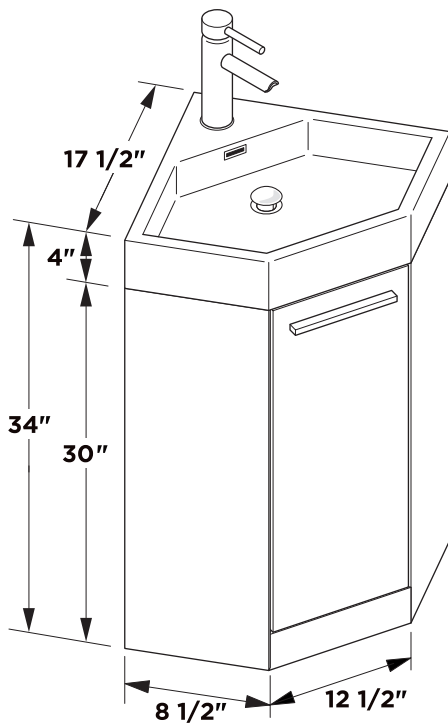


Note: All dimensions and specifications are approximate and subject to change without notice.

TOOLS FOR ASSEMBLY




PARTS

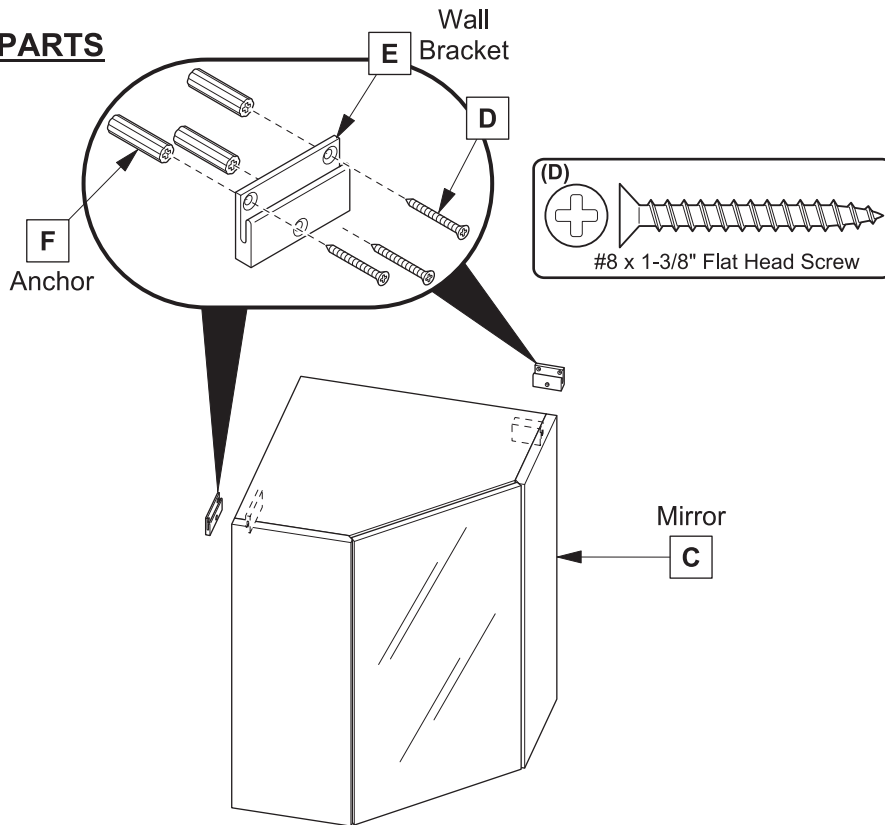

1


Install cabinet (C)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

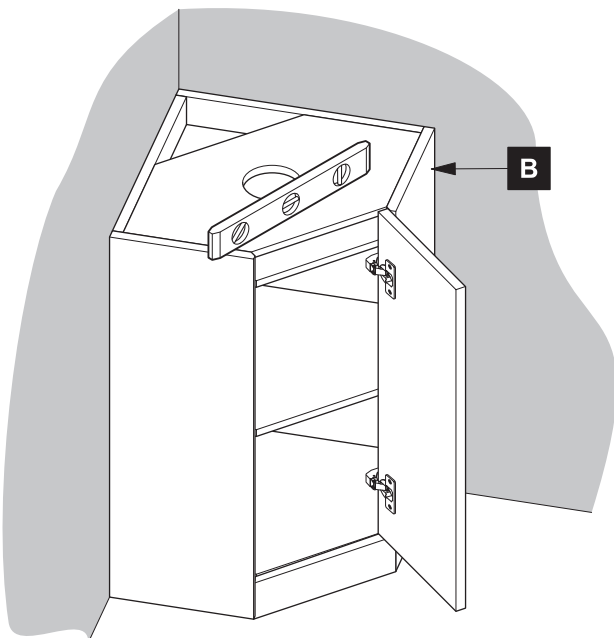

2

Apply silicone and install sink (B)

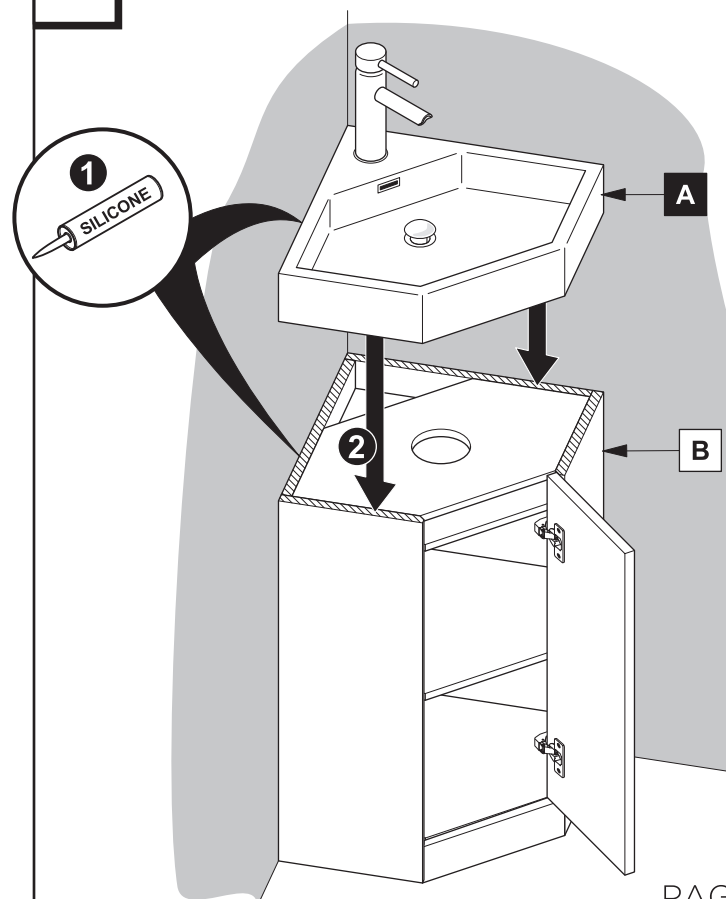

CODA INSTALLATION GUIDE

PAGE 2


3

Install brackets (E)

4


Install medicine cabinet (C)

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various wall constructions. Screws provided do not attach to all wall construction types.

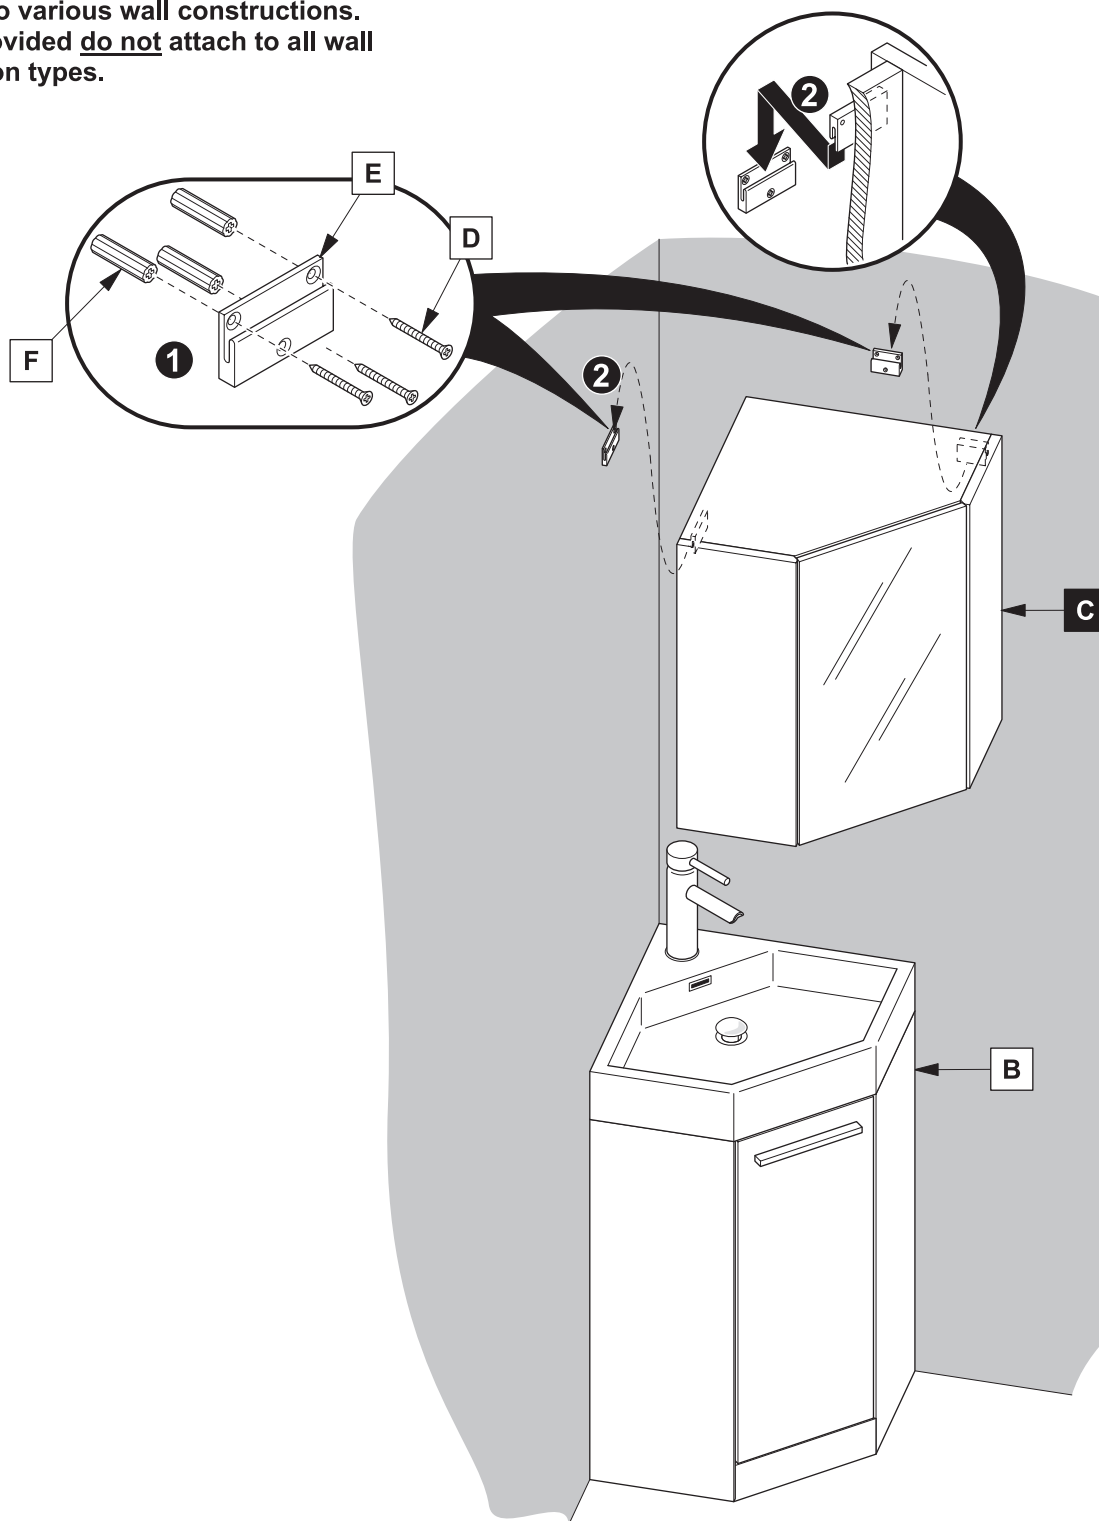


P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS

Your item may appear slightly different from the illustration

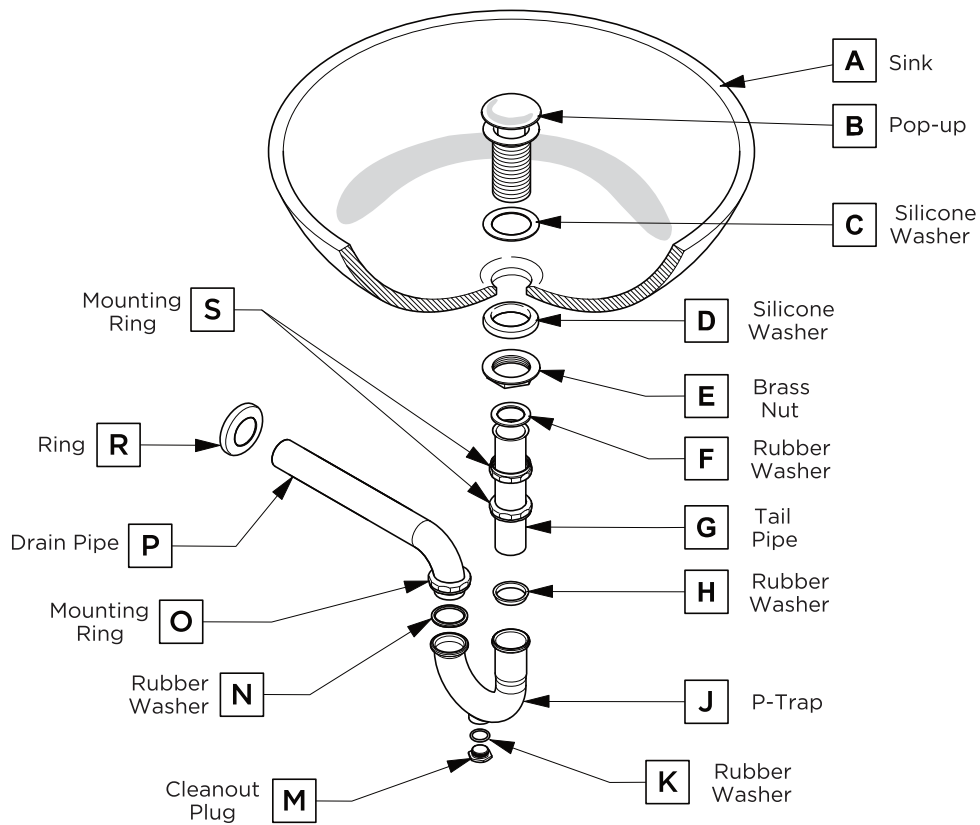


POP-UP INSTALLATION

FOR SINKS WITHOUT OVERFLOW

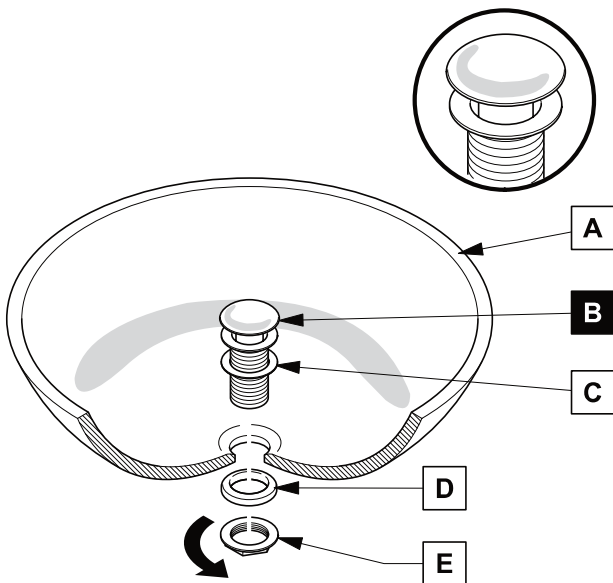

OR


FOR SINKS WITH OVERFLOW

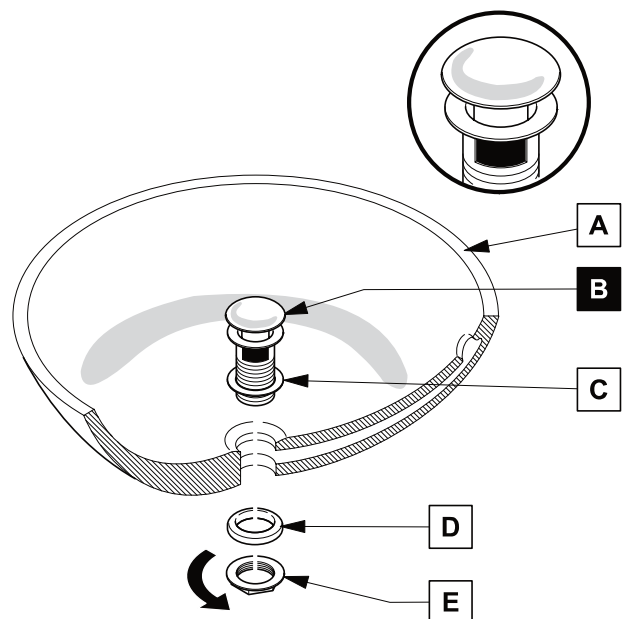

P-TRAP INSTALLATION

1

Install tail pipe (G)

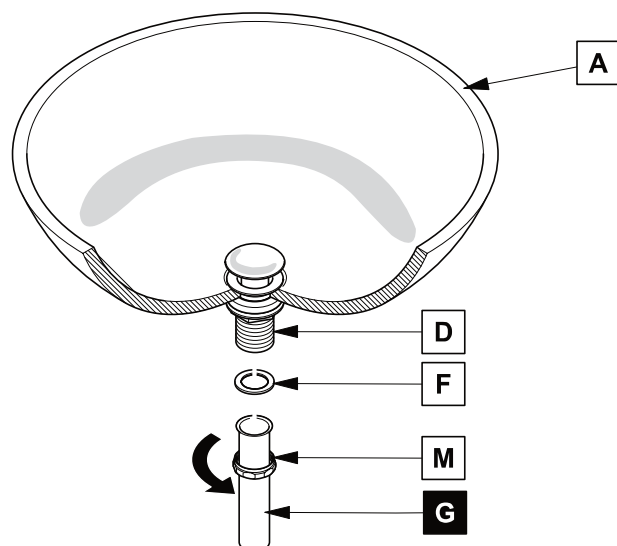

2

Install p-trap (J)

