



IMPORTANT NOTICES: For easy installation, please read all the instructions completely before beginning. Before installing this product, make sure that water line trash is cleared to avoid blockage.

WARNING: Assembly by a professional plumber is a required.


YOU MAY NEED

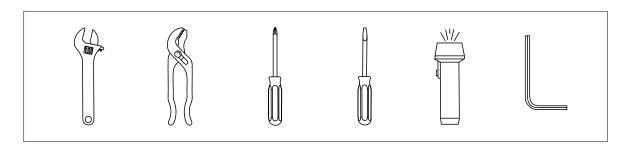


INSTALLATION PROCEDURES

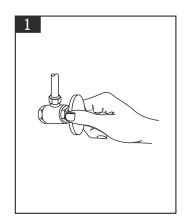

You should clean all the dirts from valve outlets. Turning off the water supply valves. This is usually found near the water meter. If you are replacing an existing faucet, remove the faucet from the sink and clean the sink surface thoroughly.

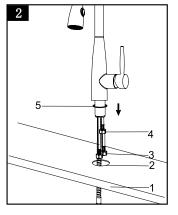

Drill a \emptyset 1-3/8"to \emptyset 1-1/2" hole (2) in sink (1) Put rubber gasket(5) into base groove and then insert the faucet through the hole (2).

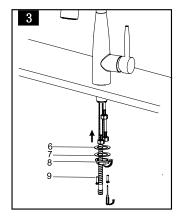


Put all hose through the plastic gasket (6) then through the metal washer (7), finally screw the locking nut (8), tight it with (9).


8002 005

Single Handle Pull-Out Kitchen Faucet INSTALLATION GUIDE




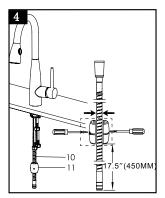


Fix weight balance(11) on the suitable position of sprayer flexible hose (10) to keep the pulling smoothly. The distance from the end of the outlet pipe connector to the weight balance should be 17.5".

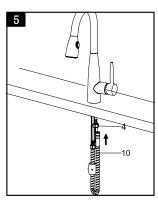

Connect the hose (10) with outlet pipe (4).

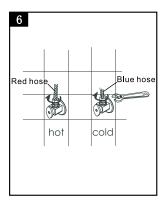

Connect the flexible hoses to the Water-supplying value (left to hot water and right to cold)

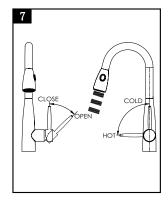

Pull the handle rightward in horizontal to turn on the faucet, Leftward in horizontal line to turn off. Move the hand counterclockwise from cold the hot.


CAUTION: Maintenance


- 1. Replacement parts may be available at the store where you purchased your faucet.
- 2. Always turn off water and relieve pressure working before on your faucet.

NOTES: Cleaning Instructions

- 1. To keep the faucet clean you should clean the faucet frequently.
- 2. Clean the faucet with clear water or mild, then dry the faucet with soft cotton cloths.
- 3.Do not use any abrasive cleansers cloths, or paper towel.
- 4. Do not use any acid or abrasive detergent.



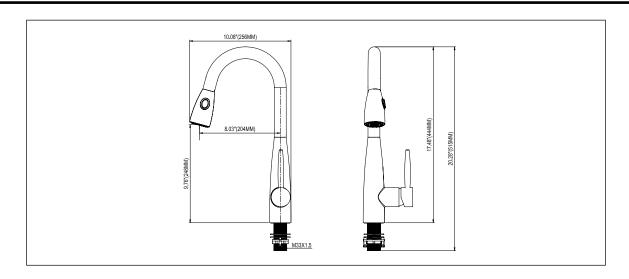

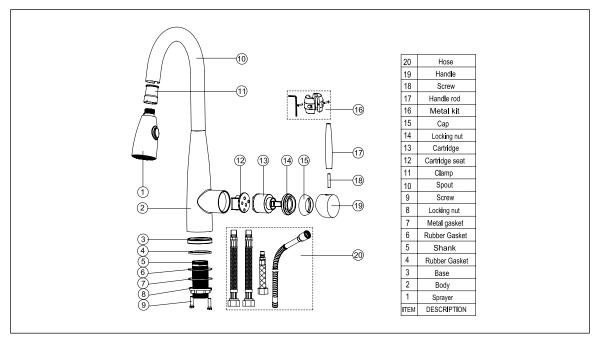

TROUBLE-SHOOTING

If you've followed the instruction carefully and your faucet still does not work properly, take these corrective steps.

Problem	Cause	Action
Leaks underneath handle.	Cartridge has come loose.	Tighten the cartridge.
Aerator leaks or has an inconsistent water flow pattern.	Aerator is dirty or worn out or misfitted.	Unscrew the aerator to clean or replace washer, or replace the aerator.
Water will not shut off completely.	Dirty or worn out washer in cartridge.	Remove handle and cartridge to check if the washer is damaged permanently or dirty. Re-install cartridge.